

Sole Manufacturer and Distributor in the Czech Republic:
ATEC v.o.s.
Location of factory: ATEC v.o.s., Opolanská 350, 289 07 Libice nad Cidlinou
Czech Republic

ATEC 321 FAETA

Flight and Operations Manual

Libice nad Cidlinou, March 2008

Type of aeroplane **ATEC 321 FAETA**

Serial number

Identification label

LAA CR type licence **ULL-04 / 2005** issued **19. 10. 2005**

This aircraft is not registered at the state office and is to be operated at operator's own responsibility.

The aeroplane must be operated according to the information and limits of this flight manual. This manual must ever be on the board of aeroplane.

This manual must be at all times carried on board of the aircraft

Contents	Chapter
General	1
Operational Limits	2
Emergency Instructions	3
Standard Instructions	4
Specifications	5
Assembly, Disassembly	6
Aircraft Description and Systems	7
Maintenance	8
Weight, Centre of Gravity	9
Enclosure 1	
Record of Revisions	

Chapter 1

1. General

1.1. Introduction

1.2. Personal Data of the Owner

1.3. Aircraft Description

1.4. Completing of the Manual, Changes

1.5. Specification

1.6. Three-View Sketch

1.1. Introduction

The information provided within this manual is a necessary requirement for an effective and safe operation of the **ATEC 321 FAETA** aircraft. This information and documents is compiled around manufacturer's recommendations, and therefore should be given the utmost importance.

1.2. Personal Data of the Owner

Owner of aircraft:

Address:

Telephone No:

Date of ownership from - to:

Owner of aircraft:

Address:

Telephone No:

Date of ownership from - to:

Owner of aircraft:

Address:

Telephone No:

Date of ownership from - to:

1.3. Description of the Aeroplane

ATEC 321 FAETA is an ultralight two-seater, cantilever, low-wing aircraft of all carbon composite construction. The landing gear has a fixed tricycle undercarriage with a steerable front wheel. The power plant is a pull arrangement and consists of a ROTAX 912 UL 80 HP or ROTAX 912 ULS 100 HP engine and a two-blade or three-blade ground adjustable propeller FITI ECO COMPETITION.

1.4. Modifications and Changes

If any changes or modifications to the aircraft are made, the owner of the aircraft must notify the manufacturer and supply drawings and specifications of materials used. If the aircraft is sold, the manufacturer must be notified with the name and address of the new owner.

1.5. Specification

Dimensions

Wing span	9,6 m
Length of fuselage	6,2 m
Total height	2,0 m
Wing area	10,1 m ²
Depth of mean aerodynamic chord	1,11 m
Span of horizontal tail surface	2,4 m
Flap position	I 10 ° 45 mm II 20 ° 90 mm III 35 ° 150 mm
Aileron deflection	up 20 ° 90 mm down ... 12 ° 55 mm
Elevator deflection	up 22 ° 80 mm down ... 18 ° 65 mm
Rudder deflection	L/R +-20° 180 mm

Airfoil Section

Root section	SM 701
End section	SM 701

Landing Gear

Wheel spacing	1,9 m
Wheel base	1,4 m
Tire dimensions	350 x 120
Tire pressure	0,16 MPa / 1,6 atp
Spring system	
Main wheels	composite spring
Front wheel	rubber spring
Brakes	Main wheels hydraulic disc brakes

Rescue System installed / not installed	USH 52 S SOFT PACK, v _{MAX} = 293 km/h
--	--

Weights

Empty weight	kg
Maximum take-off weight	450	kg
Maximum take-off weight including rescue system installed	472,5	kg
Maximum weight of luggage in luggage space	5	kg

Power Plant and Engine Parameters

Propeller manufacturer	Josef Faturik	
Type of propeller	FITI ECO COMPETITION 2 blade, 3 blade	
Engine manufacturer	Bombardier – ROTAX GmbH	
Engine type	ROTAX 912 UL 80 HP	ROTAX 912 ULS 100 HP

Power

Take-off power	59,6 kW/80 HP/5800 RPM	73,5 kW/100 HP/5800 RPM
Maximum continuous power	58,0 kW/78 HP/5500 RPM	69,0 kW/94 HP/5500 RPM
Cruising power	37,7 kW/51 HP/4800 RPM	44,6 kW/60 HP/4800 RPM

Engine Speed

Maximum take-off engine speed	5800 RPM / 5 minutes maximum
Max. continuous engine speed	5500 RPM
Cruising engine speed	4800 RPM
Engine idle speed	1400 RPM approximately

Oil Temperature

Minimum	50 °C	50 °C
Maximum	140 °C	130 °C
Operational optimum	90 °C-110 °C	90 °C-110 °C

Cylinder Head Temperature

Minimum	60 °C	60 °C
Maximum	150 °C	135 °C

Oil Pressure


Maximum short time operated by cold start	7,0 bar
Minimum	0,8 bar (engine speed below 3500 1/min)
Operational	2,0 – 2,5 bar (over 3500 1/min)

Fuel Type See Art. 2.10.

Oil Type Any branded oil for 4 stroke motorcycle engines with gearbox additives. Power class API SF, SG + GL4 or GL5.
AeroShell Sport Plus 4 10W-40 in preference recommended.

ROTAX 912 UL is not certified aeronautical engine. An engine failure may occur at any time. The pilot is fully responsible at all times for the operation of this engine and accepts all risk and consequences of an engine failure!
The correct operation of this aircraft is the sole responsibility of the pilot.

1.6. Three-View Sketch

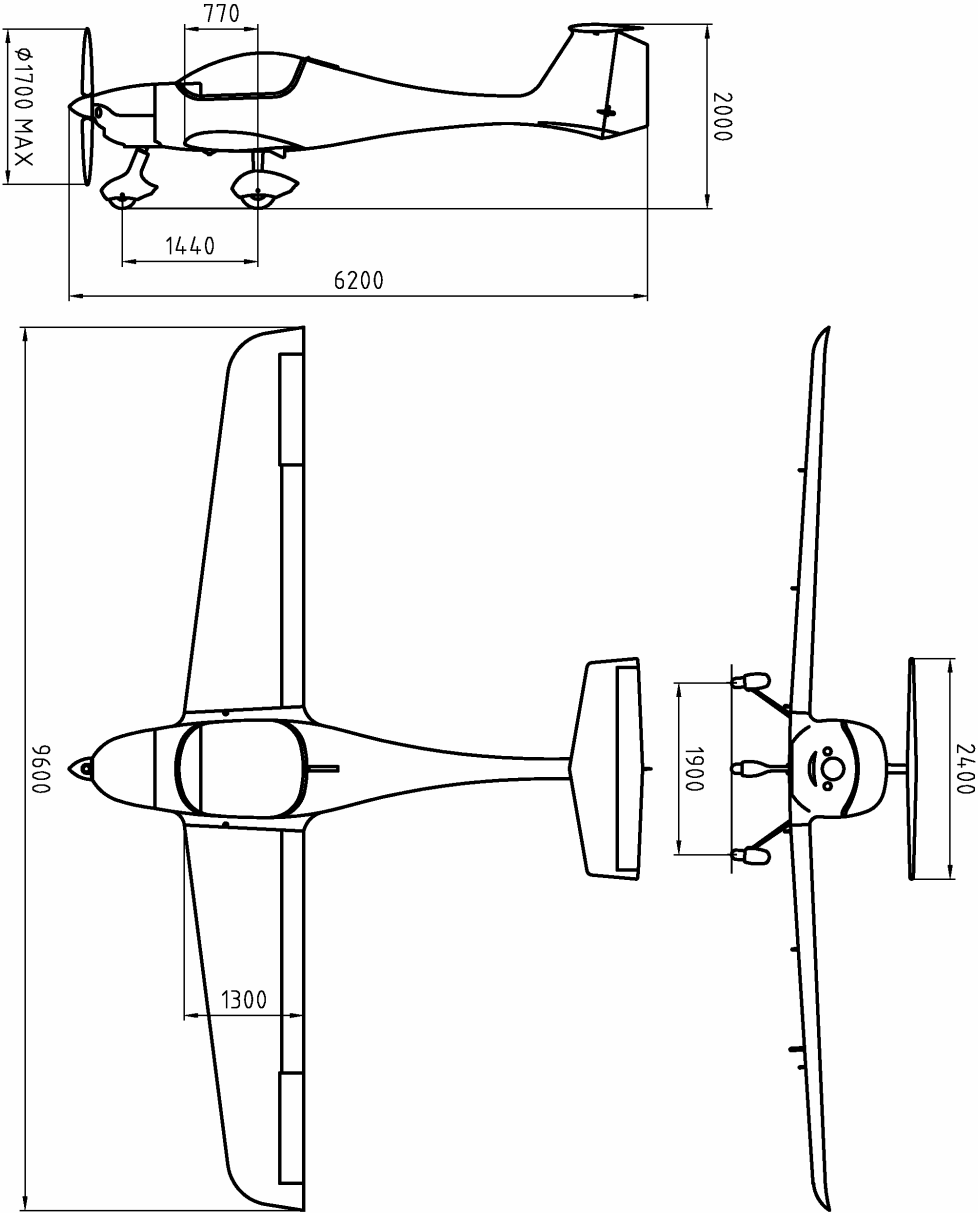

Chapter 2

2. Operational Limits

2.1. Introduction

2.2. Air Speeds

2.3. Weights

2.4. Centre of Gravity

2.5. Manoeuvre and Gust Envelope

2.6. Permitted Manoeuvres

2.7. Operational Load Factors

2.8. Type of Operation

2.9. Crew

2.10. Fuel

2.11. Wind

2.12. Other Limits

2.13. Placards and Markings

2.1. Introduction

The chapter 2 contents are operational limits necessary for a safe operation of the aircraft

2.2. Air Speeds

Never exceed speed V_{NE} 295 km/h 159 kt

Do not exceed this speed in any case

Design manoeuvre speed V_A 165 km/h 89 kt

**Do not use full deflection of the rudders and sudden control operations above this speed.
Overload of the aircraft may occur**

Maximum design cruising speed V_C 227 km/h 123 kt

Operation over this speed must be conducted with caution in smooth air only

Max. cruising speed at severe turbulence V_{RA} 179 km/h 97 kt

Never exceed this speed at severe turbulence

Max. speed, flaps deflected to I. (10 °)	$V_{FE,I}$ 130 km/h 70 kt
Max. speed, flaps deflected to II. (20 °)	$V_{FE,II}$ 120 km/h 65 kt
Max. speed, flaps deflected to III. (35 °)	$V_{FE,III}$ 110 km/h 59 kt
Recommended speed, flaps deflected to III.	V_{FE} 90 km/h 49 kt

Do not exceed this speeds by flaps deflected

Stalling speed, flaps retracted V_{SI} 64 km/h 35 kt

The loss of uplift and fall of aircraft with flaps retracted happens at this speed

Stalling speed in landing configuration V_{SO} 51 km/h 28 kt

The loss of uplift and fall of aircraft with flaps position III deflected happens at this speed

2.3. Weights

Empty weight kg

Maximum take-off weight kg

Useful load kg


Never exceed the maximum take-off weight of the aeroplane!

2.4. Centre of Gravity (CG)

CG of the empty aeroplane % MAC

Flight range of CG 27-36 % MAC

2.5. Manoeuvre and Gust Envelope

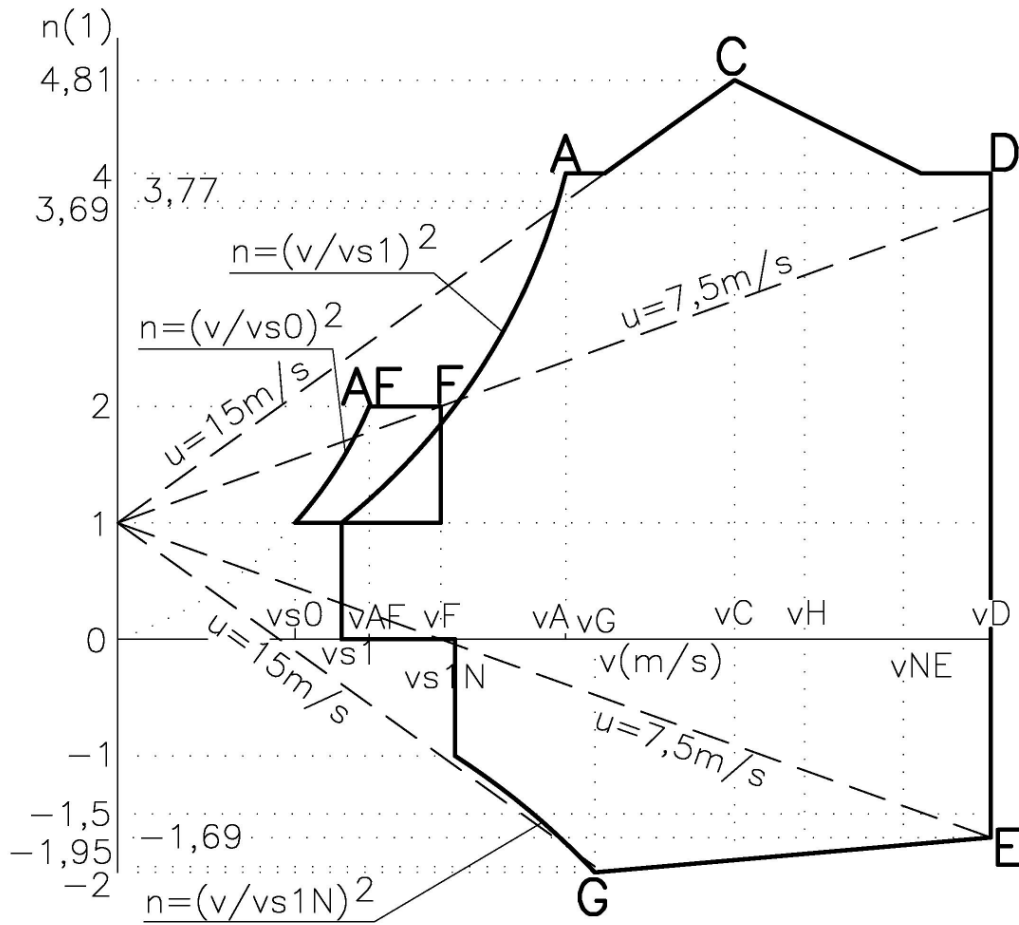

v_{S0}	=	51,2	km/h	=	14,2	m/s	=	27,6	kt
v_{S1}	=	64,0	km/h	=	17,8	m/s	=	34,6	kt
v_{AF}	=	81,2	km/h	=	22,6	m/s	=	43,8	kt
v_{S1N}	=	116	km/h	=	32,2	m/s	=	62,6	kt
v_F	=	109	km/h	=	30,3	m/s	=	58,9	kt
v_G	=	172	km/h	=	47,8	m/s	=	92,9	kt
v_A	=	165	km/h	=	45,8	m/s	=	89,1	kt
v_C	=	227	km/h	=	63,1	m/s	=	123	kt
v_H	=	270	km/h	=	75,1	m/s	=	146	kt
v_{NE}	=	295	km/h	=	81,9	m/s	=	159	kt
v_D	=	330	km/h	=	91,7	m/s	=	178	kt

2.6. Permitted Manoeuvres

Category of the aeroplane: Normal

Operations are limited to non-aerobatic manoeuvres that include:

- Any manoeuvres incident to normal flying
- Training of stalls
- Steep turns, in which the angle of bank is not more than 60°

Aerobatic operations are prohibited!

2.7. Operational Load Factors

Maximum positive load factor in CG +4,0 g
Maximum negative load factor in CG -2,0 g

2.8. Type of Operation

Permitted day flights VFR only (flights by unobstructed field of vision)

IFR flights (instrument flights) and flights by ice formation are prohibited!

2.9. Crew

Number of seats 2
Minimum weight of crew 50 kg / 110 lb (see corrections Art. 9.4)
Maximum weight of crew 180 kg / 397 lb (see corrections Art. 9.4)

2.10. Fuel

Recommended motor unleaded petrol of minimum octane number RON 90.

Fuel capacity 70 l / 19 us gal
Not usable rest of fuel 0,7 l / 0,18 us gal

2.11. Wind

The safe taking off and landing is possible if the following wind speed limits are not exceeded:

- a) taking off or landing against wind up to 12 m/s
- b) taking off or landing tail wind up to 3 m/s
- c) taking off or landing cross wind up to 6 m/s

2.12. Other Limits

Smoking and using of mobile telephones is prohibited in the aircraft.

2.13. Placards and Markings

The aircraft shall be equipped with mandatory placards placed on instrument panel containing following information:

- Identification of aircraft
Identification label. Serial number. Designation. Empty weight. Maximum take of weight.
- Operating limitations
Weight limits depending on weight of crew, fuel and luggage. Speed limits for standard flight configurations.
- Passenger Warning
Definition of aircraft category, its airworthiness conditions and limitations. Intentional spins, stalls and aerobatics prohibition.

Chapter 3

3. Emergency Instructions

3.1. Engine Failure - Take Off

3.2. Engine Failure - in Flight

3.3. Rescue System Deployment

3.4. In Flight Fire

3.5. Engine Loss

3.6. Emergency Landings

3.7. Precautionary Landing

3.8. Aborted Landing

3.9. Vibration

3.1. Engine Failure on Take-Off

1. **Push stick forward to get the aircraft into gliding attitude and maintain airspeed of 100 km/h (54 kt).**
2. Determine the wind direction, adjust flaps for suitable position, turn off fuel valve, switch-off ignition, adjust safety belts and switch-off the master switch just before landing.
- A. At a height up to 50 m get the aircraft into landing configuration and carry out a landing with respect for obstructions in take-off direction.
- B. At a height above 50 m choose a suitable area for emergency landing.

3.2. Engine Failure in Flight

1. **Get the aircraft into gliding attitude and maintain airspeed of 100 km/h (54 kt).**
2. Check a fuel level, switch on and make sure ignition is switched on.
3. If no problem found, try restarting the engine once more using additional fuel system.
4. If restarting impossible, use the instructions 3.1.

3.3. Rescue system deployment

In distress by final loss of flight control do activate the rescue system

1. Switch off ignition
2. Adjust safety belts
3. Activate the rescue system

In case of landing on a limited area when collision is inevitable, use the rescue system for a braking devise.

The aircraft can be damaged or the crew may be injured due to using a rescue system

3.4. Fire in flight

1. Close the fuel valve
2. Open the throttle
3. Switch off the main switch and ignition
4. Do emergency landing
5. Get off the aircraft

3.5. Engine Loss

1. Speed 100 km/h 54 kt
2. Flaps retracted
3. Normal flight conditions

3.6. Emergency landing

1. Carried out in case of engine failure
2. Speed 100 km/h 54 kt
3. Adjust safety belts
4. Flaps according to situation
5. Announce the situation by the aeroplane radio station
6. Close the fuel valve
7. Turn off ignition
8. Turn off the main switch

3.7. Precautionary Landing

Carry out in case of the loss of orientation, fuel exhaustion or for other reason if the aircraft is fully controllable.

1. Determine the wind direction
2. Choose a suitable landing area
3. Carry out a low pass into the wind along the right-hand side of landing area and inspect the area thoroughly.
4. Carry out a circuit flight
5. Calculate the landing plan
6. Land in the first third of the landing area using landing flaps

3.8. Aborted Landing

Carry out in case of wrong calculation of landing manoeuvre or after jump out by landing in case of pilot's consideration to abort landing manoeuvre and continue to fly.

1. Set up engine speed on maximum power
2. Set up take-off flaps position – I
3. Get level speed 110 km/h 59 kt
4. Draw up control stick slowly to get aircraft into climbing by speed 110 – 120 km/h 59 – 65 kt
5. Retract flaps

3.9. Vibrations

In case of unusual vibrations occurs.

1. Set the engine speed to where vibration is least
2. Carry out the safety landing checks for a possible emergency landing and head for the nearest airport

INTENTIONALLY BLANK

Chapter 4

4. Standard Procedures

4.1. Pre-Flight Inspection

4.1.1. Procedures Before Entering the Cockpit

4.1.2. Procedures After Entering the Cockpit

4.1.3. Procedures Before Engine Start, Starting the Engine

4.2. Engine Warm up, Engine Test

4.3. Taxiing

4.4. Engine Check

4.5. Procedures Before Take-Off

4.6. Take-Off and Climb Away

4.7. Cruising Flight

4.8. Descend and Landing

4.9. Flight in Rainy Conditions

4.1. Pre-Flight Inspection

It is important to carry out a proper pre-flight inspection failure to do so or perform an incomplete inspection could be the cause of an accident. The manufacturer recommends using the following procedure:

4.1.1. Procedures Before Entering the Cockpit

1. Check ignition – turned off.
2. Check main switch – turned off
3. Check the wings, wing surfaces ailerons and flaps, clearances, hinges and connections of the controls, security of the wing pins, Pitot tube.
4. Check the tail surfaces, elevator and rudder for secure connections, clearances and free movement.
5. Check the fuselage, the surface and state.
6. Check the landing gear, laminate springs, security of main and front wheels, their covers, screws and nuts, proper tire pressure, brake function.
7. Engine – the state of fastening of the engine covers, the state of the engine bed, intact fuel, oil and cooling system hoses, the fuel system drain.
8. Propeller – the surface state, if it is intact, the state and fastening of the propeller cone.
9. Cockpit – control of fastening and proper locking of the canopy, correct function and condition of the electrical installation of instruments, the state of the flight instruments, control of the fuel level, proper function of controls.

4.1.2. Procedures After Entering the Cockpit

1. Check foot operated controls – function
2. Check brakes – function, brakes on
3. Check hand – operated controls – function
4. Check flaps – function, retract
5. Check engine controls – switched off, throttle idle
6. Check fuel valve – turned on
7. Check fuel level indicator – fuel volume
8. Check ignition – turned off
9. Check main switch – turned off
10. Check instruments – state, zero positions, adjust altimeter

4.1.3. Procedures Before Engine Start, Starting the Engine

1. Rescue system – unlock
2. Safety belts – fasten
3. Close the canopy and secure
4. Check fuel valve – turned on
5. Check throttle – idle
6. Open the choke if the engine is cold
7. Brakes on
8. Main switch on

9. Ignition on
10. Pull up the control stick
11. Start the engine
12. Oil pressure minimum within 10 seconds
13. Turn off the choke
14. Warm up the engine to the operating temperature

4.2. Engine Warm up

Start to warm up the engine at 2000 rpm, hold approx. 2 minutes, continue until 2500 rpm till the oil temperature reaches 50 °C. Check both ignition circuits according to Art. 4.5.

4.3. Taxiing

Recommended speed of taxiing is 15 km/h 8 kt max, direction is controlled by the front wheel.

4.4. Engine Ignition Check

1. Brakes on
2. Engine speed 4000 RPM
3. Switch off first ignition circuit – engine speed drop not over 300 RPM
4. Switch on – 4000 RPM
5. Switch off second ignition circuit – engine speed drop not over 300 RPM

Speed difference between circuits running separately not over 120 RPM

4.5. Pre Take-Off

Compulsory procedures prior take-off:

- | | | |
|-----|----------------------------------|---------|
| 1. | Brakes | checked |
| 2. | Foot-operated controls | checked |
| 3. | Hand operated controls | checked |
| 4. | Flap position I set and | checked |
| 5. | Fuel valve on | checked |
| 6. | Choke turned off | checked |
| 7. | Throttle idle | checked |
| 8. | Fuel gauge indicator | checked |
| 9. | Instruments on and within limits | checked |
| 10. | Safety belts secure | checked |
| 11. | Cockpit secure and locked | checked |

4.6. Take Off and Climb Away

By accelerating until the maximum position of the throttle is reached, make the aeroplane move. With the help of the front wheel and the rudder keep the aeroplane in the axis of the runway. At speed of 70 km/h you make the aeroplane fly off the earth by a light pull of the stick and continue the flight until 110 km/h. Then by gradual pull you make the aeroplane start climbing at the optimum speed of 110 km/h. During the take-off, the marginal engine values must not be exceeded.

4.7. Cruising Flight

ATEC 321 FAETA has good flight features in the whole range of permitted speeds and centre of gravity positions. The cruising speed is in the range **120 – 227 km/h** **65 – 123 kt**.

4.8. Descend and Landing

Carry out the descent with the throttle in idle run at speed of 100 km/h 54 kt
Flaps position limitation according to Art. 2.2.

Procedures in the final:

1. Speed 90 km/h 49 kt
2. Wing flaps in position III (position II in strong turbulence or headwind)
3. Throttle idle or corrected if necessary
4. Instruments in the permitted limits

Landing

The aeroplane in the hold-up position decreases its speed by a gradual pull of the control stick until it touches down at speed of 70 km/h 38 kt. After the touch down of the front wheel, the landing run can be cut down by breaking.

Do not apply a maximum brake effect except of an extreme situation. An undue wear of tyres, brake lining and disc comes to and an over-stress of undercarriage and other parts may shorten durability of an aircraft rapidly.

4.9. Flight in Rainy Conditions

During the flight in the rain, the pilotage should be carried out with increased caution because of the decreased visibility and cockpit transparency. Furthermore, one should take into account a shortened hold-up position during the landing and extended take-off distance.

Maintain the following speeds during the flight in the rain:

- | | | |
|-----------------------|----------------------|------------|
| 1. Climb away | 110 km/h | 59 kt |
| 2. Cruising flight | 120 – 180 km/h | 65 – 97 kt |
| 3. Descent at landing | 110 km/h | 59 kt |

Chapter 5

5. Performances

5.1. Introduction

5.2. Air Speed Indicator Corrections

5.3. Stalling Speeds

5.4. Loss of Height by Stalling

5.5. Take off Distance at 15 m Height

5.6. Rate of Climb

5.7. Cruising Speeds

5.8. Range of Flight

5.1. Introduction

The information on speedometer calibration, stalling speed and other performances of the ATEC 321 FAETA with ROTAX 912 UL 80 HP and ROTAX 912 ULS 100 HP engine and propeller FITI ECO COMPETITION 3B/160 adjusted on angle of attack 18°/80 HP and 21°/100 HP is provided in this chapter.

5.2. Air Speed Indicator Corrections

CAS km/h	CAS kt	IAS km/h	IAS kt	Deviation km/h	Deviation kt	Note
57,0	30,8	51,2	27,6	-5,8	-3,1	V _{S0}
69,0	37,3	64,0	34,6	-5,0	-2,7	V _{S1}
80,0	43,2	75,8	40,9	-4,2	-2,3	
100,0	54,0	97,2	52,5	-2,8	-1,5	
110,0	59,4	108,8	58,7	-1,2	-0,7	V _{FIII}
120,0	64,8	120,4	65,0	0,4	0,2	V _{FII}
130,0	70,2	132,0	71,3	2,0	1,1	V _{FI}
140,0	75,6	143,7	77,6	3,7	2,0	
158,0	85,3	164,6	88,9	6,6	3,6	V _A
170,0	91,8	178,5	96,4	8,5	4,6	V _{RA}
180,0	97,2	190,1	102,7	10,1	5,5	
200,0	108,0	213,4	115,2	13,4	7,2	
212,0	114,5	227,3	122,8	15,3	8,3	V _C
220,0	118,8	236,6	127,8	16,6	9,0	
240,0	129,6	259,9	140,3	19,9	10,7	
249,0	134,4	270,3	146,0	21,3	11,5	V _H
260,0	140,4	283,1	152,9	23,1	12,5	
270,0	145,8	294,7	159,2	24,7	13,4	V _{NE}
280,0	151,2	306,4	165,4	26,4	14,2	
300,0	162,0	329,6	178,0	29,6	16,0	V _D

5.3. Stalling Speeds

Engine idling	Flaps retracted	Flaps I (10°)	Flaps II (20°)	Flaps III (35°)
Solo	70,5 km/h 38,1 kt	61,9 km/h 33,4 kt	58,7 km/h 31,7 kt	47,1 km/h 25,4 kt
472,5 kg	64,0 km/h 34,6 kt	62,0 km/h 33,5 kt	60,8 km/h 32,8 kt	51,2 km/h 27,6 kt

Engine stopped				
One pilot	70,5 km/h 38,1 kt	61,9 km/h 33,4 kt	58,7 km/h 31,7 kt	47,1 km/h 25,4 kt
472,5 kg	64,0 km/h 34,6 kt	62,0 km/h 33,5 kt	60,8 km/h 32,8 kt	51,2 km/h 27,6 kt

5.4. Loss of Height by Stalling

Level flight flap position	Flap deflection	Height loss	
I	10°	30 m	100 ft
II	20°	30 m	100 ft
III	35°	30 m	100 ft
0	0	30 m	100 ft

5.5. Take off Distance at 15 m / 50 ft Height

Engine	80 HP		100 HP	
Runway surface	Take off distance		Take off distance	
Concrete	270 m	880 ft	245 m	800 ft
Turf	290 m	950 ft	265 m	870 ft

5.6. Rate of Climb

Engine	80 HP		100 HP	
One pilot, 100 km/h 54 kt	6 m/s	1180 FPM	7,5 m/s	1480 FPM
Two pilots 472,5 kg	4,5 m/s	890 FPM	6,0 m/s	1180 FPM

5.7. Cruising Speeds

ROTAX 912 UL 80 HP

Air speed km/h	kt	RPM	Consumption l/h
120	64,8	4000	5,8
140	75,6	4250	7,2
160	86,4	4600	9,5
180	97,2	4850	10,8
200	108	5200	13,1
230	124	5500	17,0

ROTAX 912 ULS 100 HP

120	64,8	3250	4,0
140	75,6	3700	5,5
160	86,4	4100	8,2
180	97,2	4500	10,8
200	108	4950	12,6
230	124	5500	18

5.8. Range of Flight

By maximum fuel capacity 70 l

ROTAX 912 UL 80 HP

Air speed km/h	kt	Range of fl. km	nm	Flight endurance h	15 l Flight reserve h
140	75,6	942	509	6,9	2,7
160	86,4	832	449	5,2	2,4
180	97,2	803	434	4,6	1,8
200	108	763	412	3,8	1,5

ROTAX 912 ULS 100 HP

By maximum fuel capacity 70 l

140	75,6	1270	686	9,1	3,6
160	86,4	975	526	6,1	2,4
180	97,2	833	450	4,6	1,8
200	108	781	422	3,9	1,5
230	124	610	329	2,7	1,1

Chapter 6

6. Assembly and Dismantling

6.1. Introduction

6.2. Dismantling the Horizontal Tail Surface

6.3. Dismantling the Rudder of the Vertical Tail Surface

6.4. Dismantling the Wings

6.5. Assembly

6.1. Introduction

The assembly of individual parts of the aeroplane is described in this chapter. At least two persons are necessary for the assembly and dismantling.

6.2. Dismantling the Horizontal Tail Surface

Release and unbolt the bolt M6 adjusting the position of the horizontal tail surface. This bolt is situated at the upper side of the stabiliser. Take care that spacer do not fall into the stabiliser. For assembly, it is important to preserve this spacer. Release and remove the left and right screw of the main HT fittings. Tilt the HT so that it is possible to disconnect the pin of the control. Remove the HT and put it into a safe place to prevent its damage. Secure the ball bearing with a binding wire.

6.3. Dismantling the Rudder of the Vertical Tail Surface

Release and unbolt two M5 bolts connecting rudder with the cables. Release and lift up the upper pin. The rudder slips out by moving it backwards.

6.4. Dismantling the wings

Disconnect the controls of ailerons nad flaps in the cabin space. Release and remove the lock nut of the bolt of the wing pins. Screw the bolt off by about 20 mm. The helper lifts the wing a bit by holding it at the end. By light taps on the head of the bolt the bottom pin is knocked-out. Unscrew the bolt and remove the pin. Then the upper pin is driven out with the help of a rod with 18 mm diameter. After removed pins lift up the wing and disconnect the hoses of the static and total pressure. Those hoses must not be interchanged during assembly. Disconnect strobe-light or position light cables if the aircraft equipped with them.

6.5. Assembly

The assembly is carried out in the opposite way. All pins must be cleaned and greased and then secured. Max. tightening torque is 20 Nm (2 kpm). Take care about the proper adjustment of ailerons and flaps, which is done by shortening and extending the connection struts. Always use new securing wire, new split pins and new self-locking nuts.

Chapter 7

7. Aircraft and Its Systems Description

7.1. Wing

7.2. Fuselage

7.3. Tail Surface

7.4. Landing Gear

7.5. Controls

7.6. Engine

7.7. Fuel System

7.8. Instrument Equipment

7.9. Hand and Foot Controls

7.10. Cockpit Equipment

7.1. Wing

The cantilever tapered wing with conventional ailerons, slotted flaps and wing-tips. The main spar of laminated beech wood saturated with synthetic resin at a high temperature is placed in the 30% depth of wing. The wing is reinforced by ribs of plastic and composites. The wing skin is made of carbon composite sandwich. The flaps and ailerons are of all composites construction. The centre-section is welded from high quality CrMo steel tubes.

7.2. Fuselage

The fuselage is an all-carbon composite shell reinforced by bulkheads. The fuselage cross-section is elliptic, with wing fillets and spacious cockpit. The cockpit enclosure is from organic glass and it is lifted up and backwards. The engine space in the front part of the fuselage is separated by a firewall. The engine bed and the front wheel are fastened to a fire-proof engine bulkhead.

7.3. Tail Surfaces

The T-shaped tail surfaces are of all carbon composite construction. The horizontal tail surface has a trapezoidal shape formed by a rigid stabiliser and elevator. The vertical tail surface has a trapezoidal shape. The dorsal fin part is an integral part of the fuselage, the rudder is an all-carbon shell.

7.4. The Landing Gear

The landing gear is a fixed tricycle undercarriage with a controllable front wheel. The main landing gear is formed by a pair of composite flat springs. Main wheel dimensions are 350 x 100 mm, the front one 300 x 100 mm. The front wheel leg is made of duralumin tubes and composites equipped with a rubber spring. All wheels have an aerodynamic fairing, the main undercarriage wheels have disc brakes hydraulically controlled.

7.5. Controls

The steering of all rudders is duplicated. The ailerons, elevator and the flaps are controlled with the help of connection struts and levers, the rudder with the help of steel wire ropes. Important check points have inspection openings overlapped by organic glass.

7.6. The Driving Unit

The driving unit is the engine ROTAX 912 UL or ULS and the two-blade ground adjustable propeller FITI.

7.7. Fuel System

The fuel system is formed by an integral fuselage tank with a fuel drain. Double fuel supply circuit with a spare electric pump. The pressure of supplied fuel is measured with a fuel-pressure gauge.

7.8. Instrument Equipment

The instrument equipment consists of basic instruments for flight control, engine control and navigation. The static and total pressure is taken from the Pitot tube at the bottom of the port wing. Standard instrument panels layout on the picture 7.10.

7.9. The sense of Motion of the Control Elements

Art. 7.10

Foot-operated control

By pressing the left pedal 9, the aeroplane turns left when moving at sufficient speed on the ground or in the air, and vice versa.

Hand-operated control

By pulling the control stick 3 towards the pilot, the nose lifts up (the angle of incidence increases) and the aeroplane climbs. By pushing the control stick, the aeroplane descends. By deflecting the control stick to left, the aeroplane banks to left, and vice versa.

Wing flaps – electric option

The flaps are actuated to the positions OFF, I, II, III by means of the linear potentiometer 6b. All flap positions are indicated by a control lamp.

Wing flaps – mechanical option

By pressing the securing pin on the control lever 6a, the wing flaps are released and extend to position I, II, III by an upwards motion, and vice versa.

The engine throttle


By moving the throttle 7 in the flight direction, the engine power increases, and vice versa.

Choke


Choke pushrod 11 pulled – the choke is turned on

Choke pushrod 11 pushed – the choke is turned off

7.10. Cockpit Equipment

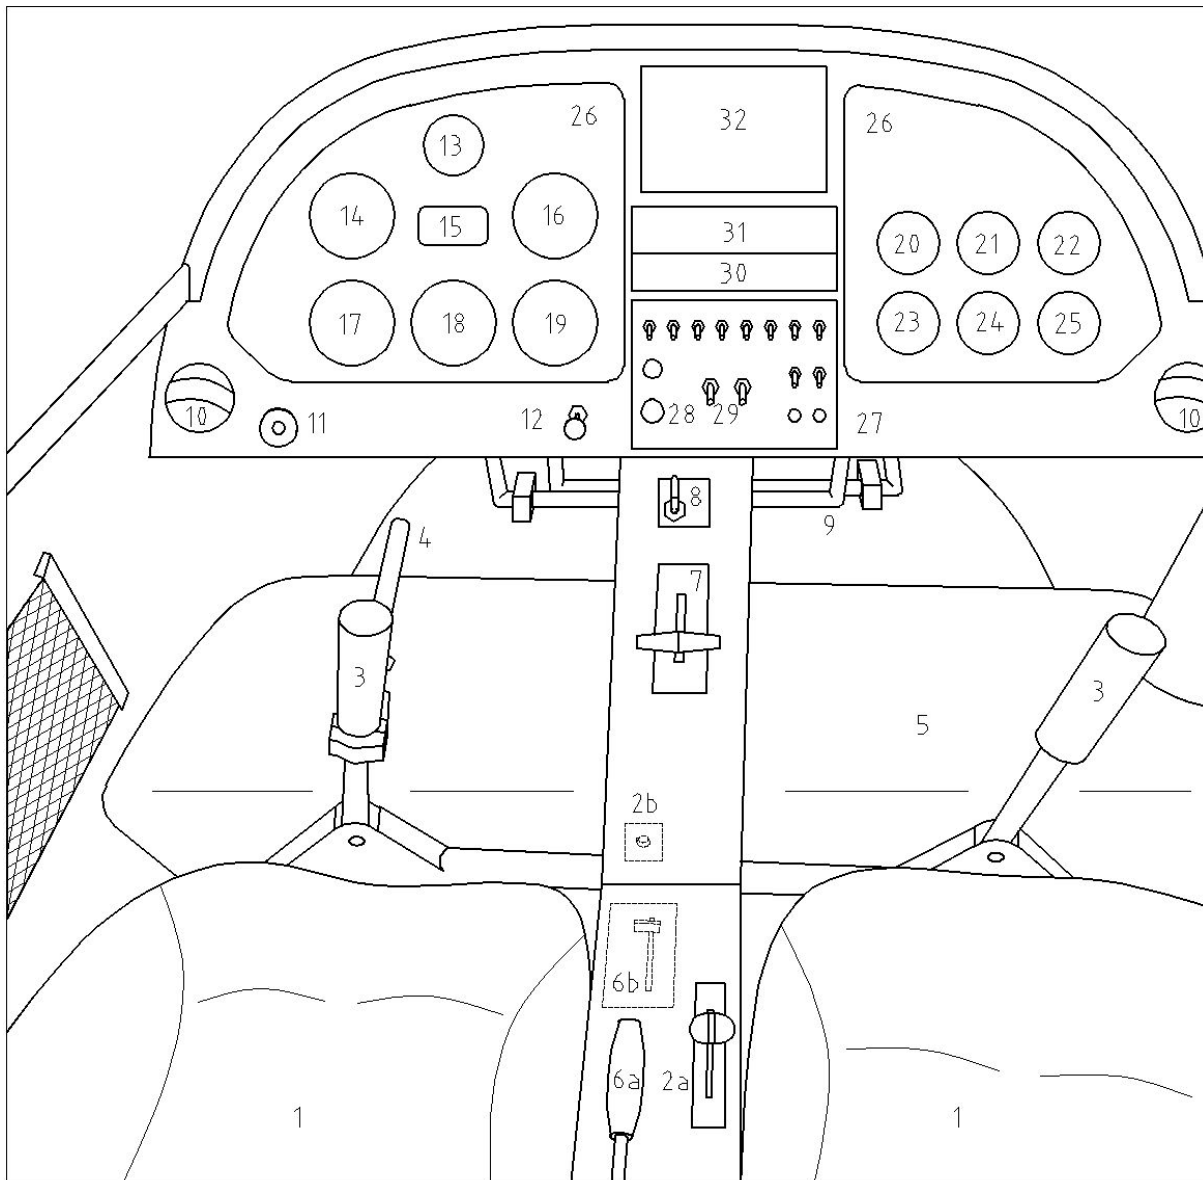

- | | |
|------------------------------------|--|
| 1 - SEAT | 17 - OPTIONAL 80mm INSTRUMENT (E.G. VSI) |
| 2a - ELEVATOR TRIM | 18 - OPTIONAL 80mm INSTRUMENT |
| 2b - ELECTRIC ELEVATOR TRIM (OPT.) | 19 - RPM INDICATOR + MOTOR HOURS |
| 3 - CONTROL STICK | 20 - OIL TEMP. INDICATOR |
| 4 - WHEEL BRAKE | 21 - CYL. HEAD TEMP. INDICATOR |
| 5 - FUEL TANK | 22 - EXHAUST GAS TEMP. INDICATOR |
| 6a - FLAP CONTROL | 23 - OIL PRESSURE INDICATOR |
| 6b - ELECTRIC FLAP CONTROL (OPT.) | 24 - FUEL PRESSURE INDICATOR |
| 7 - THROTTLE | 25 - FUEL QTY. INDICATOR |
| 8 - FUEL COCK | 26 - DASHBOARD |
| 9 - PEDALS | 27 - SWITCH PANEL |
| 10 - VENTILATION | 28 - MAIN SWITCH |
| 11 - CHOKE | 29 - MAGNETO SWITCHES |
| 12 - HEATING | 30 - RADIO (OPT.) |
| 13 - COMPASS | 31 - TRANSPONDER (OPT.) |
| 14 - AIRSPEED INDICATOR | 32 - GPS GARMIN (OPT.) |
| 15 - INCLINOMETER | |
| 16 - ALTIMETER | |



Chapter 8

8. Care and Maintenance

8.1. Maintenance Schedule

8.2. Aeroplane Repairs

8.3. Major Overhaul

8.4. Anchorage of the Aeroplane

8.5. Cleaning and Care

8.1. Maintenance Schedule

Inspection, Mandatory Work	Inspection Period				
	10	25	50	100	200
Engine					
As per ROTAX Manual attached.					
Engine Compartment					
Engine Attachment Check integrity of construction with special care for welds, fixing points, silent blocks, bushings. Surface finish quality.				X	
Bolted Connections Check surface quality of bolted connections and bearing surfaces. Securing, tightening. Tighten and re-secure if necessary, Replace self locking nuts, split pins and securing wires.			X		
Silent Blocks Check elasticity of engine bearing, integrity of rubber blocks, degree of permanent deformation. Replace silent blocks if necessary, tighten, secure.				X	
Oil, Water and Fuel Hoses Check surface integrity, liquid leakage, quality of connections, protection against oscillating parts and exhausts. Replace if necessary.		X			
Working Liquids Check level, refill keeping instruction of engine manufacturer.	X				
Coolers Check integrity, sealing, purity.				X	
Controls Check control forces, free play, hinges, end stops adjustment, self-locking. Adjust, secure.			X		
Exhausts Check integrity, sealing, corrosion degree, springs quality and prestress. Grease ball connections.				X	
Carburetters Check surface quality, controls adjustment, quality of elastic connection flange – integrity, sealing. Replace flange if material degradations or surface cracks appear.		X			
Electric Installations Check quality, integrity and purity if cables, contacts, welds, bunched cable supports and bushings. Check gauges and senders connections.					X
Propeller Attachment Check quality of bolts, tightening moments, securing.				X	
Cockpit					
Control Sticks Check free movement in longitudinal and cross direction, clearance fits, end stops adjustment, securing. Replace pins or bolts if worn-out, grease, secure.				X	
Rudder Control Check integrity of pedals with special care for surface cracks near welds. Full and free movement right and left (raise nose wheel off ground), end				X	

stops adjustment, rudder cable tensioning, clearance fits, securing. Adjust, replace worn-out parts, grease, secure.					
Flap Control Check free movement of flap control lever, stable bearing in every flap position, interlock pin wear. Replace worn-out parts, grease, secure.			X		
Canopy – Open / Close Check quality and function of locks and hinges, canopy bearing. Adjust, replace worn-out parts, grease, secure.					X
Flight Control Instruments Check legibility, markings, attachment instruments in panel, installations, wiring.					X
Electric Installations Check quality, integrity and purity of cables, insulations, contacts and welds. Battery attachment, working condition.					X
Safety Belts Check fixing points rigidity, belt surface quality, adjustment.				X	
Fuel System Check leak-proof condition, fuel supply quality, fuel pumps and valve function, tank deaeration. Replace fuel filters.		X			
Parachute Rescue System Check general condition, attachment. Do mandatory work as per instructions of rescue system manufacturer.					X
Landing Gears					
Main Gear Check attachment rigidity, surface quality, degree of permanent deformation.			X		
Wheels Check attachment, brakes condition, brake pads, disc quality, leak-proof condition. Attachment and purity of wheel spats.		X			
Front Gear Check general condition, integrity, rubber damper, clearance, springing deflection, steering quality. Grease sliding bearings, replace rubber springs if worn-out.		X			
Fuselage Check general condition, integrity. Antennas, lights and coverings attachment.					X
Wing Check general condition, surface quality, integrity, attachment, fittings, clearance. Ailerons and flaps condition, surface quality, hinges, clearance, securing. Controls condition, free movement, end positions, clearance. Pitot tube condition and attachment.			X		
Tail Surfaces					
Rudder, Elevator Check general condition, hinges, movement, clearance, securing.					X
HT Stabilizer Check general condition, attachment, fittings, securing.				X	
	10	25	50	100	200

8.2. Aeroplane Repairs

The owner of aeroplane is obliged to report to the manufacturer each damage which may have an influence on an airframe strength or flight qualities. The manufacturer determines a way of repair.

Minor repairs are the repairs of those parts, which do not participate substantially in the aeroplane function and stiffness.

Among the permitted repairs are:

- the lacquer repair
- replacing the worn-out parts
- repairing the tyres of the landing wheels

These repairs can be carried out by the owner itself. Repairs of the torsion box, spars, wing or tail surfaces must be carried out in a special workshop.

8.3. Major Overhaul

The major overhaul is carried out after 1500 flight hours but not later than 10 years after putting the aeroplane into operation, unless decided otherwise during regular technical inspections or by the company bulletin. The overhaul will be carried out in a special workshop. The overhaul and maintenance are carried out according to the instructions of the engine producer.

8.4. Anchorage of the Aeroplane

The anchorage of the aeroplane is necessary in order to protect the aeroplane against eventual damage caused by the wind or wind blasts during parking outside the hangar. For the purpose, the aeroplane is equipped with parking grips at the bottom side of the wing and at the tail skid.

8.5. Cleaning and Care

The aeroplane surface should always be treated by using suitable cleaning agents. The oil and grease rests can be removed from the aeroplane surface by suitable surface active substances or eventually by petrol. The cockpit enclosure should be cleaned only by washing using a sufficient water flow with an addition of suitable surface active substances. Never use petrol or chemical solvents.

Chapter 9

9. Weights and Ballance

9.1. Introduction

9.2. Empty Weight

9.3. Maximum Take-Off Weight

9.4. CG Range

9.5. CG Determination

9.6. Useful Load, Weight Table

9.1. Introduction

The weight, useful weight and centre of gravity information is described in this chapter.

9.2. Empty Weight

The weight of aircraft full equipped, without fuel and crew. It is weighed as a total weight of all wheels weights.

The **empty weight** of the **ATEC 321 FAETA** including ROTAX 912 ULS and standard equipment with / without rescue system is

..... kg

9.3. Maximum Take-Off Weight

..... kg

Never exceed the maximum take-off weight!

9.4. Centre of Gravity Range

CG of empty aircraft is % of MAC


The flight range of CG 27-36 % of MAC

Operation over this range is prohibited

9.5. Centre of gravity determination

The aircraft has to be weighed in flight position including crew and fuel.

Weight on main wheels	G_1	(kg)
Weight on front wheel	G_2	(kg)
Total weight	$G = G_1 + G_2$	(kg)
Distance from main wheel to front wheel centre	$x_{MW-FW} = 1,44$	(m)
Distance from main wheel centre to leading edge of wing in root point	$x_{MW-LE} = 0,77$	(m)
CG distance from main wheel centre	$x_{MW-CG} = G_2 * x_{MW-FW} / G$	(m)
Length of MAC	$b_{MAC} = 1,112$	(m)
Length of wing chord in the root area	$b = 1,300$	(m)
Back-swept MAC displacement	$s_\psi = 0,19$	(m)
Distance from CG to leading edge	$x_{CG} = x_{MW-LE} - x_{MW-CG}$	(m)
Distance from CG to leading edge of MAC	$x_{CG-MAC} = x_{MW-LE} - x_{MW-CG} - s_\psi =$ $= 0,58 - 1,44 * G_2 / G$	(m)
	$x_{CG-MAC\%} = x_{CG-MAC} * 100 / 1,112 =$ $= 52,16 - 129,5 * G_2 / G$	(%)

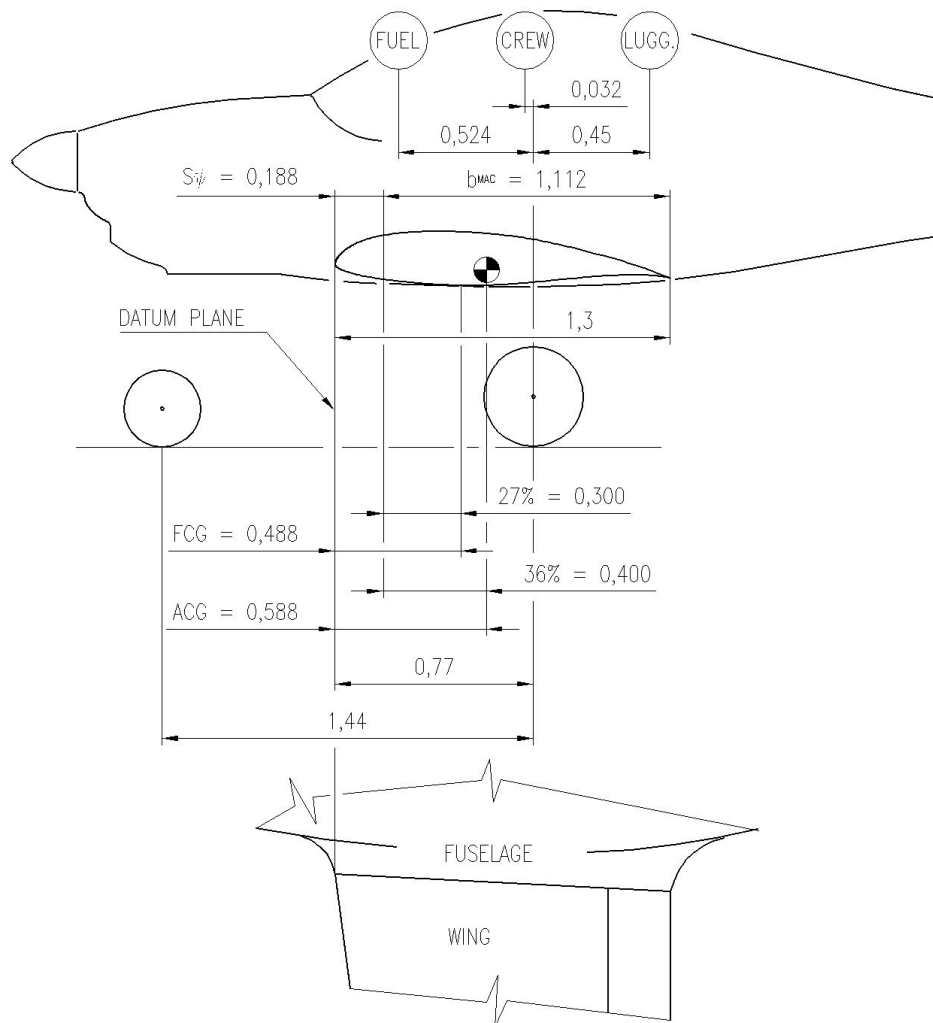

9.6. Useful weight, weight table

Useful weight is a difference between maximum take-off weight and the weight of empty aircraft.

The useful weight by empty weight kg is kg.

The aircraft weight and CG table, fuel tank 70 l, take-off weight 450 kg

Fuel in tank L 1L = 0,775 kg	Crew weight kg	Luggage weight kg	Aircraft CG % MAC	Total aircraft weight kg
0	MAX	5		450,0
0	MAX	0		450,0
¼ ... 17,5	MAX	5		450,0
½ ... 35,0	MAX	5		450,0
¾ ... 52,5	MAX	5		450,0
1 ... 70,0	MAX	5		450,0
1 ... 70,0	MAX	0		450,0
1 ... 70,0	MIN	0		
0	0	0		

The aircraft weight and CG table, fuel tank 70 l, take-off weight 472,5 kg

Fuel in tank L 1L = 0,775 kg	Crew weight kg	Luggage weight kg	Aircraft CG % MAC	Total aircraft weight kg
0	MAX	5		472,5
0	MAX	0		472,5
¼ ... 17,5	MAX	5		472,5
½ ... 35,0	MAX	5		472,5
¾ ... 52,5	MAX	5		472,5
1 ... 70,0	MAX	5		472,5
1 ... 70,0	MAX	0		472,5
1 ... 70,0	MIN	0		
0	0	0		

The aircraft CG is located in allowed range if kept the weight limits above

